


# FM-200 COMPONENT DESCRIPTION

Stop (Directional) Valves, 1/2" Thru 2"

# FENWAL®

F-93-5130

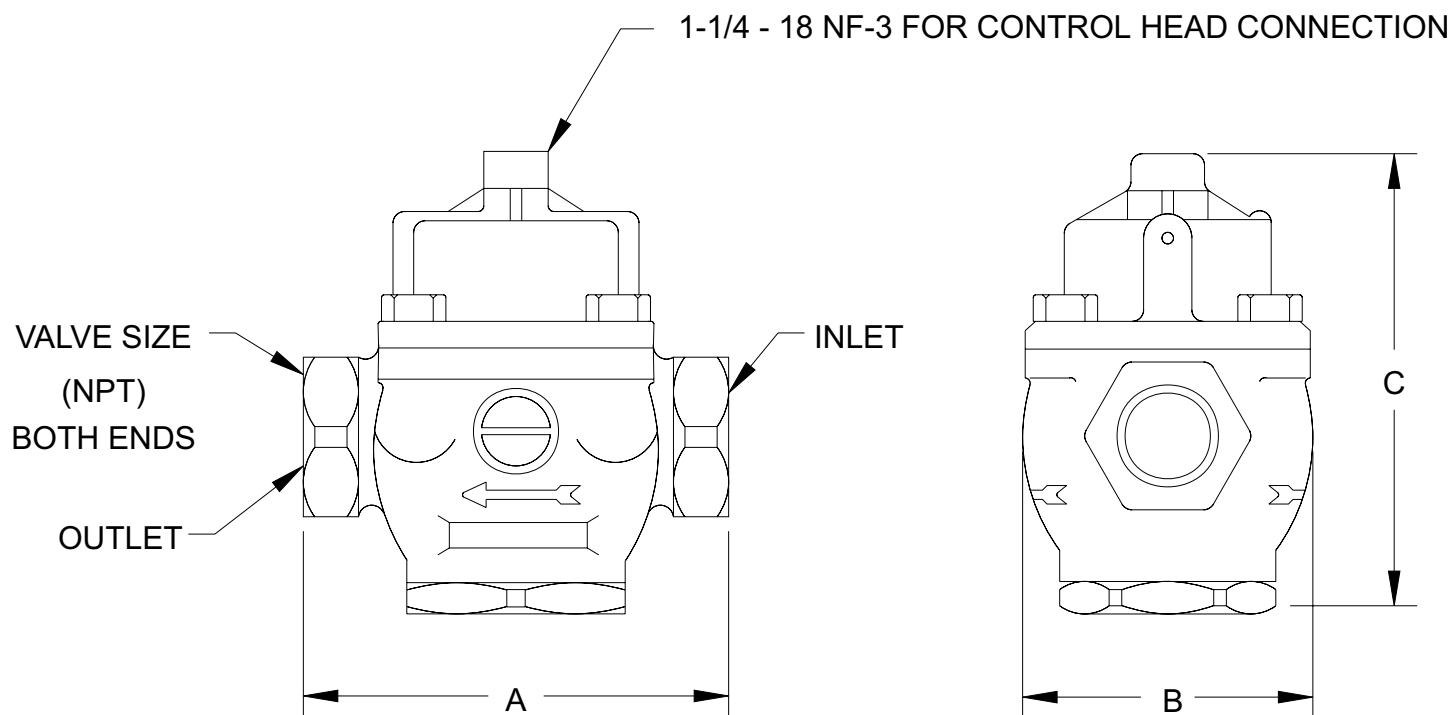

PART NUMBER	VALVE SIZE NPT	A		B		C	
		IN	MM	IN	MM	IN	MM
870023	1/2"	3.75	95	2.50	64	4.68	119
870022	3/4"	4.25	108	2.81	71	5.68	144
870122	1"	5.50	140	3.62	92	6.87	175
870032	1-1/4"	5.50	140	3.62	92	6.87	175
870123	1-1/2"	7.50	191	4.75	121	8.43	214
870049	2"	7.50	191	4.75	121	8.43	214

**MATERIALS**  
**BODY: BRASS**

**NOTES:**  
**1. VALVE MUST BE INSTALLED WITH ARROW POINTING IN DIRECTION OF FLOW.**  
**2. VALVE MAY BE INSTALLED IN HORIZONTAL OR VERTICAL PIPE RUN.**

# FENWAL®

KIDDE-FENWAL, INC.  
400 MAIN STREET, ASHLAND, MA 01721  
TEL: (508) 881-2000 FAX: (508) 881-8920  
www.fenwalfire.com



This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to perform as described herein. If you need more information on this product, or if you have a question, contact KIDDE-FENWAL, INC., Ashland, MA 01721; Telephone (508) 881-2000