SAPPHIRE SUPPRESSION SYSTEMS

Local Manual Actuator

The local manual actuator is used to mechanically operate the tank. To prevent accidental actuation, the actuator contains a steel safety pin. The pin must be removed to operate the actuator. The actuator is operated by depressing the strike button.

The actuator can be mounted either on the top port of the tank valve or on top of the electric solenoid valve.

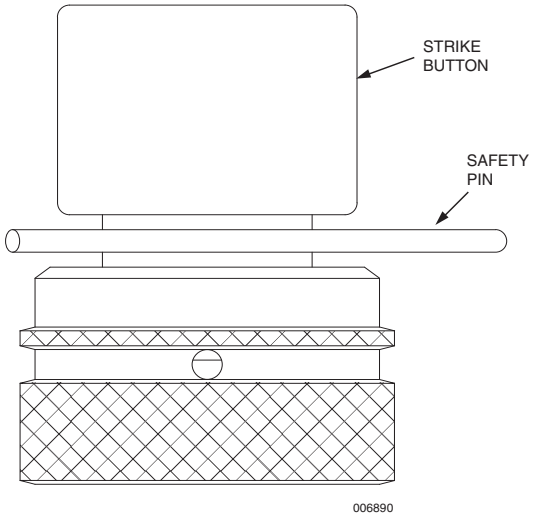

Component	Material	Approvals
Local Manual Actuator	Body: Brass Safety Pin: Steel Actuation Pin: Stainless Steel	UL Listed ULC Listed FM Approved

Shipping Assembly Part No.	Description
570549	Local Manual Actuator

ANSUL and SAPPHIRE are trademarks of Ansul Incorporated or its affiliates.

INDOREED THE LEADING OF FIRE COMPANY PROVIDERS