

System Components

UL EX-4510 4-1-05 Page 1-8

REV. 1



Flexible Discharge Hose

The flexible discharge hose is used to connect the tank valve outlet to rigid distribution piping. On single tank systems, a check valve is not required. Three sizes of flexible discharge hoses are available: 1 in. (for 20, 50, and 90 lb. tank sizes), 2 in. (for 140, 280, 390, and 450 lb. tank sizes), and 3 in. (for 850 lb. tank sizes).


The 1 in. flexible hose or the adaptor, Part No. 570557, can be used to connect the valve outlet to rigid pipe.


The 2 in. flexible hose or the adaptor, Part No. 570558, can be used to connect the valve outlet to rigid pipe.


When using a 3 in. flexible discharge hose (without a manifold), three single tank swivel adaptors are available for connection from the valve outlet to the flexible discharge hose.

Component	Material	Approvals
1, 2, 3 in. Flexible Discharge Hose	Stainless Steel Tubing with Stainless Steel Braid Cover	UL Listed ULC Listed FM Approved

Shipping Assembly Part No.	Description	
570539	1 in. Flexible Discharge Hose	
570538	2 in. Flexible Discharge Hose	
69990	3 in. Flexible Discharge Hose	
570557	1 in. Single Tank Swivel Adaptor	
570558	2 in. Single Tank Swivel Adaptor	
69470	3 in. Flared to 3 in. NPT Single Tank Swivel Adaptor	
69471	3 in. Flared to 3 in. Grooved Single Tank Swivel Adaptor	
570363	3 in. Flared to 3 in. BSPT Single Tank Swivel Adaptor	

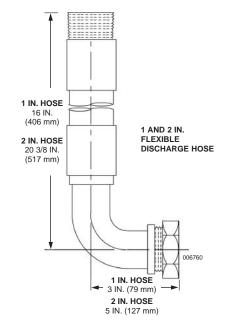

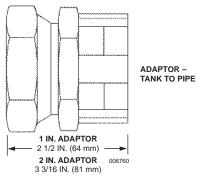

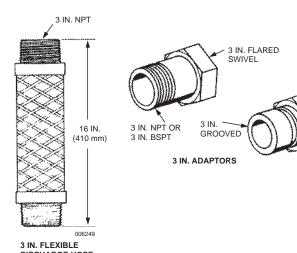



ANSUL and SAPPHIRE are trademarks of Ansul Incorporated or its affiliates.

FLARED SWIVE